



Klemmleiste =AHY10+H1-X1

Ziel intern					Ziel extern
=Anlage+Ort-BMK-Anschl	Querverweis	Brücke	Zusatz	Klemmen-Nr.	=Anlage+Ort-BMK-Anschl
-K4:2	2.2		⚡	11	+H5-X2:1
-K4:4	2.2		⚡	12	+H5-X2:2
-K4:6	2.2		⚡	13	+H5-X2:3
-X100:PE	2.2			PE	+H5-X2:PE
-K1:2	2.3		⚡	14	+H5-X2:4
-K1:4	2.4		⚡	15	+H5-X2:5
-K1:6	2.4		⚡	16	+H5-X2:6
-Q1:14	2.5			24	+P1-X1:3
-K3:15	2.5			25	+P1-X1:4
-K4:43	2.7			26	+P1-X1:5
	2.6			27	
	2.6			28	
	2.7			29	
	2.7			30	
	2.8			31	
	2.7			32	
	2.7			33	
	2.8			34	
-S1:2	1.1			L1	
-S1:4	1.1			L2	
-S1:6	1.1			L3	
-H1	1.2			N	
-X1:PE	1.2			PE	

An den Klemmen 27, 29, 32 bis 34 werden die Anschlusspunkttexte nicht dargestellt.